

# Important Safety Information

To prevent the unexpected danger or damage, please read this information before installing and repairing the phone. There are "Caution" and "Warning", it means as follows;



**Warning**

This means danger. It means that the action could cause bodily injury or death.



**Caution**

You are capable of doing something that could result in physical injury to you or equipment damage.

- After reading the manual, please keep it ready for the next user.



**Warning**



Only trained and qualified service personnel shall install, replace or service the phone.



Do not spill liquid like water on the phone. If so, call for the service center as this may result in a fire or an electric shock.



If you see smoke or smell something burning, unplug the power cord and the phone line. Call for service centre immediately.



If the power adapter is used, do not touch the plug with wet hands. This may result in a fire or an electric shock.



Do not tug the power cord or the phone line. This may result in a fire, an electric shock or equipment damage.



Do not use the phone during a thunderstorm. Lightning strike may result in a fire, severe electrical or acoustic shock.

# Important Safety Information

## ..... ⚠ Warning '.....



Do not use the power adapter if the power cord or wall outlet are damaged. This may result in a fire or an electric shock.

## ..... ⚠ Caution .....



Ensure that children do not pull on phone cords. This may injure children or result in equipment damage.



The ear-piece houses a magnetic device which may attract pins or small metal objects. Keep handset clear of such objects and check before use.



Avoid placing the phone in an area that is dusty, damp or subject to vibration.



Choose a site that is dry and well ventilated.



Do not plug multiple plug-packs into one power outlet. This may result in overheating of the plug-packs and result in a fire or plug-pack failure.




Do not put the heavy things on the phone.

# Important Safety Information

..... ⚠ Caution .....



Do not drop or throw the phone.

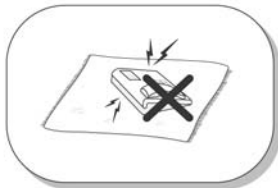


Static electricity discharge will damage electronic components.



Keep out of direct sunlight and away from heat.



No user serviceable parts inside. No not insert a screw driver or any metal objects into the phone. This may cause electric shock or damage the equipment and will render the warranty void.

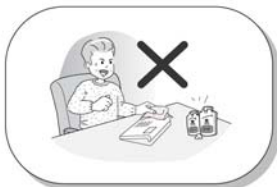

Clean the phone with a soft, dry cloth only. Do not use volatile liquids such as petrol, alcohol or acetone as this may cause a fire or result in discoloration or damage to plastics. Do not clean with wax or silicon products as these may enter the equipment and cause operation to become unreliable.

※ The above picture may differ from actual products.

※ The above picture may differ from the actual products.

# LDP-7000 Series Model

LDP-7008D



LDP-7004D



LDP-7004N



# Input/Output Devices and Button


**LDP-7008D**



- 1 LCD Display
- 2 Handset
- 3 Headphone Socket (Ear/Mic Mode)
- 4 Speaker
- 5 Speaker Button
- 6 Hold/Save Button
- 7 Volume Button
- 8 Loop Button
- 9 Message Waiting LED
- 10 Dnd/Fwd Button
- 11 Call Back Button
- 12 Flexible Button
- 13 Speed Button
- 14 Trans/Pgm Button
- 15 Handsfree Microphone

# Input/Output Devices and Button

**LDP-7004D**

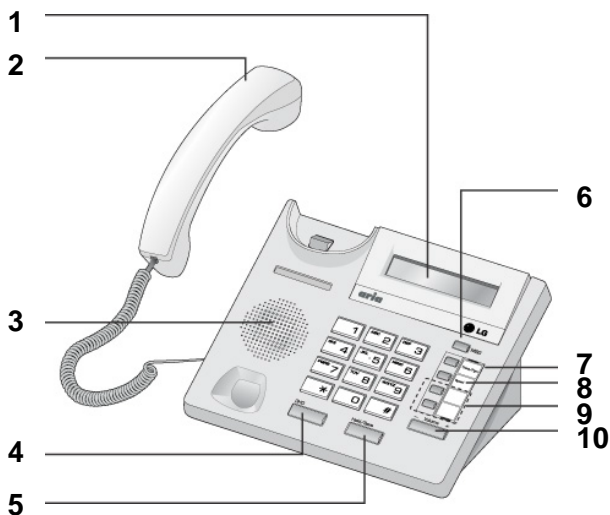

- 1** LCD Display (LDP-7004D only)
- 2** Handset
- 3** Speaker
- 4** OHD Button
- 5** Hold/Save Button
- 6** Message Waiting LED
- 7** Trans/Pgm Button
- 8** Speed Button
- 9** Flexible Button
- 10** Volume Button

---

## Input/Output Devices and Button


| Item                    | Description   |
|-------------------------|---|
| <b>Handset</b>          | Used for handset call.  |
| <b>Earphone-Jack</b>    | The optional earphone into the handset to provide a hands-free phone conversation.  |
| <b>Speaker</b>          | Outputs tones and voice.  |
| <b>Speed Button</b>     | Used to access speed dialing, speed programming, saved number redial.   |
| <b>Dnd/Fwd Button</b>   | <p>The DND (Do Not Disturb) feature blocks all incoming calls. When DND is active, the red LED in this button is illuminated.</p> <p>It is also used to activate call forward, e.g. to another station or voicemail. When call forward is activated, the red LED flashes.</p> |
| <b>Hold/Save Button</b> | This button put a call on hold or save information when programming.  |
| <b>Speaker Button</b>   | Speaker toggles the speakerphone state, and the red LED is illuminated when the speakerphone is active.   |
| <b>OHD Button</b>       | On Hook Dial allows 7004N&D users to dial and monitor call state without lifting the handset.   |

# Input/Output Devices and Button

| Item                        | Description   |
|-----------------------------|---|
| <b>LCD Display</b>          | Shows dialed and incoming numbers (where applicable) and on the 7008D it will display other information about call status, dialing directories and message information. |
| <b>Trans/PGM Button</b>     | This button is used to initiate a call transfer (TRS) or to enter programming mode (PGM).   |
| <b>Flexible Button</b>      | The last two (7004D/7004N) or six (7008D) flex buttons can be assigned outside line presentation or as one-touch feature access. (See codes at rear of guide)           |
| <b>Call back Button</b>     | A station can initiate a call back request to a busy station. Once that station becomes idle, the initiating station is signaled.                                       |
| <b>Volume Button</b>        | The volume button adjusts the audio levels for ringing, handset and speakerphone or OHD functions .   |
| <b>Hand-free Microphone</b> | Microphone for hands-free speakerphone function.  |
| <b>Loop Button</b>          | Loop Button(s) are required for presentation of outside lines to the telephone. At least one is required per telephone.   |



# Cable Connection

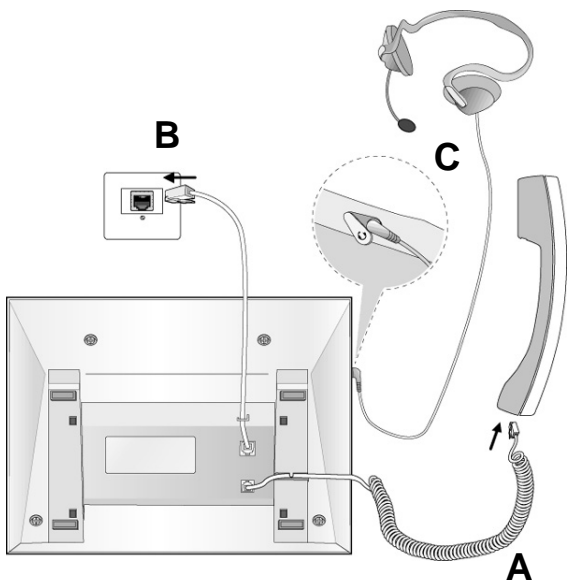

## Cable connection

- A** Connect the telephone cord (curly cord) to the handset and the other end to the handset jack at the bottom of the telephone.
- B** Connect the line cable to the port at the bottom of telephone and the other end to the wall socket.
- C** Connect the Headphone to the headphone jack on the left side of the telephone.  
(As viewed from the front.)

※ **Note:** 7004N and 7004D does not support integral headphone mode.

---

# Basic Function

## Placing an Outside Call

- Lift handset, press OHD/Speaker or dial from live keypad.
- Dial 9.
- Dial the desired number.

## Placing an Intercom Call

- Lift handset, press OHD/Speaker or dial from active keypad.
- Dial the station number.

## Placing an Outside Call on Hold

- While connected to an external call, press [HOLD] button.

## Retrieving a Outside Call on Hold

- Press the flashing flexible button.
- ※ **Note:** calls will automatically recall after pre-defined time

## Re-directing an Incoming Call (Call Pick-up)

When you hear another phone ringing in your area,

- Lift handset, press OHD/Speaker or dial from live keypad.
- Dial \*7.
- Dial the extension number of the ringing station.
- You will be connected automatically to the caller.

## Answering an Waiting Call

- Press the flashing CO button.

---

# Basic Function

## Call Wait (Camp-on)

- After receiving station busy tone, dial \* .
- Camp-on tone is heard in the called station.
- When called party answers, talk or hang up to transfer another call to the called party.

## Last Number Redial

- Lift handset, press OHD/Speaker or dial from active keypad.
- Dial 5 5 2 or press speed button + dial ' \* ' + Hold/Save button.

## Storing Station Speed Dial Numbers

- Press the [TRANS/PGM] and [SPEED] Button.
- Dial speed bin number. Range (XXX-ZZZ)
- Dial speed dial number you wish to store.
- Press the [HOLD/SAVE] button.
- Enter the name associated to the number.
- Press the [HOLD/SAVE] button.
- You will hear confirmation tone.

## Using Station Speed Dial Numbers

- Press the [SPEED] button
- Dial the desired speed dial bin number.


## Group Call Pick-up

When hearing an unattended phone ringing in your area,


- Lift handset.
- Dial \* \* .
- You will be connected automatically to the caller.
- ※ **Note:** you must be in the same pick-up group.

# Code for Flexible Button Programming


## Register of Flexible Button

**1** **Trans/Pgm**  
 Press the [Trans/Pgm] button.

**2**  Press the [Flexible] button.

**3** **Trans/Pgm**  
 Press the [Trans/Pgm] button.

**4**  Enter code number.

**5** **Hold/Save**  
 Press the [Hold/Save] button.

# Code for Flexible Button Programming

## Button Assignment for LDP- 4N/4D/8D

| Function              | Code Number    |
|-----------------------|----------------|
| CONF button           | TRANS/PGM + 91 |
| CALLBK button         | TRANS/PGM + 92 |
| DND/FWD button        | TRANS/PGM + 93 |
| FLASH button          | TRANS/PGM + 94 |
| MUTE button           | TRANS/PGM + 95 |
| MON button            | TRANS/PGM + 96 |
| REDIAL button         | TRANS/PGM + 97 |
| Ring Type             | TRANS/PGM + 11 |
| Enblock mode          | TRANS/PGM + 14 |
| Ear-Mic Headset       | TRANS/PGM + 17 |
| ICM Ring              | TRANS/PGM + 18 |
| CO Ring               | TRANS/PGM + 19 |
| COS Down              | TRANS/PGM + 21 |
| Walking COS           | TRANS/PGM + 23 |
| Auth. Code Register   | TRANS/PGM + 31 |
| Auth. Code Change     | TRANS/PGM + 32 |
| Set Wake-up Time      | TRANS/PGM + 41 |
| Set Preselected MSG   | TRANS/PGM + 51 |
| Set Customer MSG      | TRANS/PGM + 52 |
| Two way Record        | TRANS/PGM + 54 |
| Record User Greeting  | TRANS/PGM + 61 |
| Listen Time & Date    | TRANS/PGM + 62 |
| Listen Station Number | TRANS/PGM + 63 |
| Listen Station Status | TRANS/PGM + 64 |
| Record Page MSG       | TRANS/PGM + 65 |
| Erase User Greeting   | TRANS/PGM + 66 |
| Erase Page MSG        | TRANS/PGM + 67 |
| LCD Display Language  | TRANS/PGM + 71 |
| Background Music      | TRANS/PGM + 73 |
| Register Station Name | TRANS/PGM + 74 |
| Speakerphone/Headset  | TRANS/PGM + 75 |
| Headset Ring Mode     | TRANS/PGM + 76 |
| Account Code          | TRANS/PGM + 80 |
| DID Call Wait         | TRANS/PGM + 81 |
| ICM Hold              | TRANS/PGM + 83 |
| LOOP button           | TRANS/PGM + 84 |
| Camp-on               | TRANS/PGM + 85 |
| Call Log Button       | TRANS/PGM + 57 |
| Activate CONF Room    | TRANS/PGM + 43 |
| Deactivate CONF Room  | TRANS/PGM + 44 |