

## Changing Time on Toshiba CTX/ CIX

- From extension 200 or main telephone
- Dial **#652**
- Enter Time as HHMMSS (6 digits) and press #.

## Changing Date on Toshiba CTX/ CIX

- From extension 200 or main telephone
- Dial **#651**
- Enter Date as YYMMDD (6 digits) and press **#**.